


Torque Measurement Annular Transducers for use with HT/ET/EBT/PTS/PTM-92 and 119

Model		Annular Transducers for use with HT/ET/ EBT/PTS/PTM-92	Annular Transducers for use with HT/ET/ EBT/PTS/PTM-92	Annular Transducers for use with HT/ET/ EBT/PTS/PTM-119	Annular Transducers for use with HT/ET/ EBT/PTS/PTM-119
Part Number		50753.xxx	50793.xxx	50755.xxx	50756.xxx
Torque Range	N·m	270 - 2,700	400 - 4,000	450 - 4,500	600 - 6,000
Square Drive		1"	1"	1½"	1½"
Dimensions (mm)	А	58	58	63	63
	В	88	88	120	120
	ØС	73	73	86	86
Weight (kg)		4.6	4.6	7.9	7.9

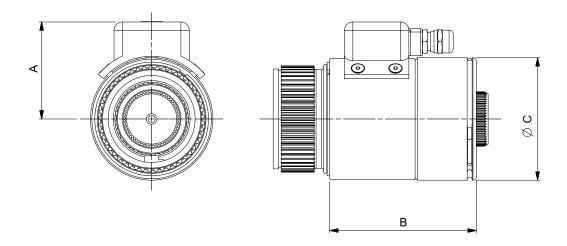

www.norbar.com Issue 1